

Notice of Added Functions

This leaflet explains the functions that have been added on this instrument. Read it in conjunction with the Owner's Manual.

Bluetooth Functionality (Owner's Manual: p.14)

Using the Page Turning Function and MIDI Transmit/Receive Function Simultaneously

 
For example, this lets you use the pedal to turn pages while receiving MIDI and playing sounds on this unit.

1. Place the mobile device that you want to connect nearby this unit.

MEMO

If you have more than one unit of this model of unit, power-on only the unit that you want to pair (power-off the other units).

2. In Function mode ([Metronome]+[Split] buttons), select "F 15" and press the [▶/■] button.
3. Use the [-] [+] buttons to select "□□," and then press the [▶/■] button.
4. Select "F 16" and press the [▶/■] button.
5. Use the [-] [+] buttons to select "P - Π," and then press the [▶/■] button.
6. Turn on the Bluetooth function of the mobile device.

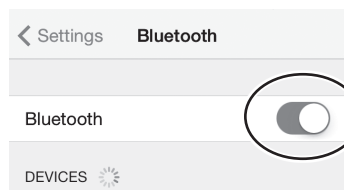

MEMO

The example shown here uses the iPhone. For details, refer to the owner's manual of your mobile device.

7. On your mobile device, tap "F-140R."

This unit will be paired with the mobile device. When pairing succeeds, the model name of this unit ("F-140R") is added to the "Paired Devices" list of the mobile device.

MEMO

- If you're using an iOS device (iPhone or iPad), the screen of the iOS device indicates "Bluetooth Pairing Request." Tap the [Pair] button.
- If the screen of the mobile device requests you to enter a "Pass Key," enter "0000" (four zeros).

8. In the mobile device's app (e.g., GarageBand), establish a connection with this unit.

9. Hold down the [Metronome] button and press the [Split] button to exit Function mode.

Changing the Operating Keys of the Page Turning Function

The key operations for turning pages will differ depending on the music score display app that you're using. You can choose which keys of this unit will operate the page turning function.


1. In Function mode ([Metronome]+[Split] buttons), select "F 17" and press the [▶/■] button.
2. Use the [-] [+] buttons to select setting, and then press the [▶/■] button.

Indication	Setting	Explanation
1	Cursor Up/Down	The [▲] [▼] keys of the keyboard are used by the page turning app.
2	Page Up/ Page Down	The [Page Up] [Page Down] keys of the keyboard are used by the page turning app.
3	Cursor Left/Right (added)	The [◀] [▶] keys of the keyboard are used by the page turning app.


3. Hold down the [Metronome] button and press the [Split] button to exit Function mode.

Note when using an already-paired iOS device iOS

 The following operation is required after each time that you switch the Bluetooth page-turning/MIDI function or execute a factory reset.

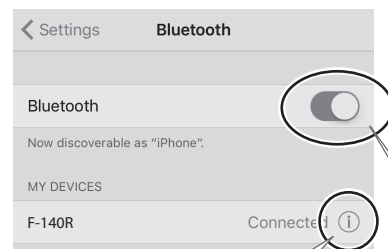

 1. Disconnect "F-140R"

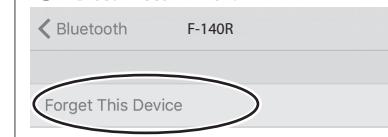

2. Turn off.

For details, refer to the owner's manual of your iOS device.